

## Flingtime - Toilet (Rev 20130124)

### Rules-of-thumb

- Both sea cocks are normally CLOSED. (Don't stand on them; emergency bungs are kept on board)
- The only sea cock operated by toilet users is the sea water flushing inlet on the right (starboard) side of the toilet.
- The equipment is plastic so don't use force, abrasives, or unsuitable chemicals
- **ONLY human waste and minimum paper can be flushed**
- The system is an aerobic digester. The air pump hums and should be on 7x24
- Holding tank pump-out is done by the skipper.  
(75litres max capacity or about a dozen+ flushes.)
- Check the level gauges (although they are sometimes quite erratic; you would be too in that muck). If the tank full light is on, then don't use the toilet. (panel above and to the right of the seat.) **Overflowing is not an option !**




### Operating Instructions

1. Before use check that there is enough water in the bowl to prevent the toilet paper becoming compacted at the bottom of the bowl. (Do a small flush if necessary; See 3.)
2. ...use a minimum amount of paper
3. Open RHS flushing water sea cock (anticlockwise), unlock the pump handle (fore-aft line is the locked position), push valve lever to left to open flush control.
4. Operate the pump efficiently with long smooth strokes.
5. If necessary, clean the bowl with the 'brush'
6. Push valve lever to right for lowering the water level in the bowl.  
Some water remaining is OK.
7. Close sea cock, lock pump handle, wash hands.



Pump handle in locked position

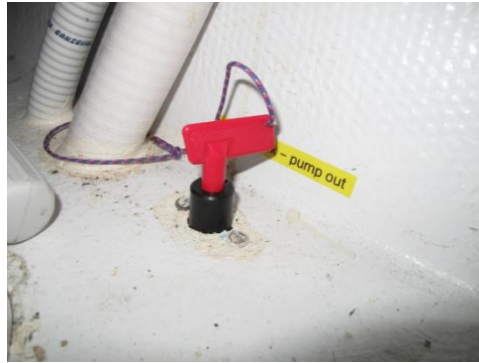

Holding tank macerator pump On/Off key switch, requires open pump-out sea cock (on port/LHS), for skipper use only (legal issues)  
Clockwise is ON.

**For prolonged periods of non-use:-**

- Leave sea-cocks closed, pump bowl dry
- Fill to rim with fresh water
- Add a cap or two of toilet conditioner
- Pump out 8 strokes to clear whole pipe length to the holding tank
- Clean and hose down the area with shower water
- Pump out the shower sump then add a cap of conditioner to sump

**To pump out holding tank:-**

- In open waters required distances away from nominated areas;
- Open LHS sea-cock, turn on the macerator pump
- Listen for a change of sound as air is being expelled, about 1/2 a minute.
- Unplug the key switch, close the sea-cock,.
- (If the breaker trips, reset it on the main 12v panel.)